



338 REMINGTON ROAD
 CUYAHOGA FALLS, OH 44224
 Phone: 330.920.3125 Fax: 330.920.3126

SS-5001

Product Description

SS-5001 is a 1-part silicone RTV developed for coating applications. SS-5001 offers unprimed adhesion to many metals and plastics. When cured, SS-5001 results in a very flexible and durable silicone adhesive coating. The elastomer resists weathering, ozone, moisture, UV and high temperatures.

Product Features


- Fast RT cure
- Excellent unprimed adhesion to plastic, metal and glass
- Self-leveling liquid

Typical Applications

- Coating assemblies
- Industrial sealing
- Thin section potting & encapsulation

Chemical Cure System

Acetoxy

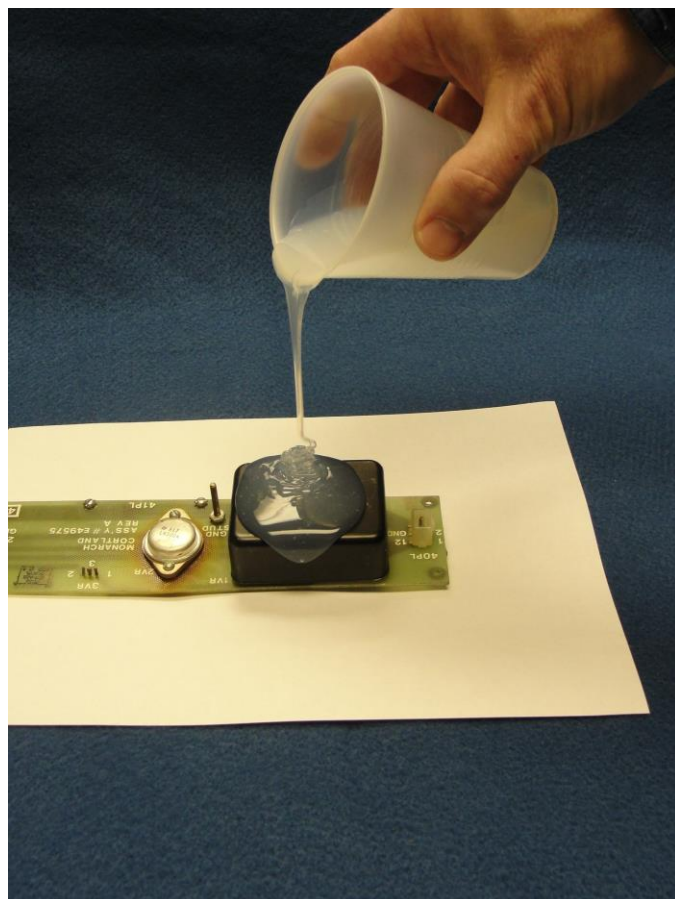

High Strength Neutral Cure Silicone RTV Adhesive Sealant

Typical Properties

Color	Translucent
Viscosity, cps	30,000 – 40,000
Specific Gravity	1.03
Consistency	Self-leveling liquid
Working Time @ RT	8 Minutes
Tack Free Time @ RT	14 Minutes
Cure Time	72 Hours @ RT
Durometer	25 Shore A
Tensile Strength	325 PSI
Elongation	325%
Peel Strength	40 PPI

Curing

Cure speed can be accelerated with increased humidity and heat to very rapid cure times. Typical utilization involves dispensing in open air and after exposure to ambient humidity, a room temperature cured rubber is formed.

Solids

98% solids

Adhesion

Excellent unprimed adhesion to plastic, metal and glass

Limitations

Do not use product on head gaskets, solvent or fuel immersion applications. Allow to fully cure before putting assembly into service. Ensure enough product remains between flanges to be effective in an assembly.

Handling and Safety

For maximum shelf life, keep containers sealed when not in use. Keep out of the reach of children. Uncured sealant irritates eyes and skin. Refer to the SDS.

Shelf Life

Sealed containers are guaranteed for 12 months from the ship date when stored in a cool dry area below 70°F.

Applicable Standards

Conforms to MIL-A-46106B Type II Group I

Limited Warranty

All recommendations, statements and technical data herein are based on tests we believe to be reliable and correct, but accuracy and completeness of said tests are not guaranteed and are not to be construed as warranty, either expressed or applied. User shall rely on his/her own information and tests to determine suitability of the product for the intended use, and the user assumes all risk and liability resulting from the use of this product. Manufacturer's sole responsibility shall be to replace that portion of product that the manufacturer proves to be defective. Manufacturer shall not be liable to the buyer or any third party for injury, loss or damage directly or indirectly resulting from the use of, or inability to use, the product. Recommendations or statements other than those contained in a written agreement signed by an officer of the manufacturer shall not be binding by the manufacturer.

This product has not been tested for, and is therefore not recommended for, uses for which prolonged contact with mucous membranes, abraded skin, or blood is intended; or for uses which implantation within the human body is intended.

*****Customized versions available upon request*****